Connect-2

FUNCTIONAL DOCUMENTATION

MySmartWindow



Functional manual · shutter control, precise press, Multi-Mode, special modes and app

OVERVIEW

Connect-2 · overview

Connect-2 is a three-button wall switch for raising, lowering and stopping your roller shutter. It also has a centre Multi-Mode button, a reset button and special modes (AP Mode and Master Mode). You set it up from the MySmartWindow app.

CONTENTS

- Physical control: UP and DOWN to raise, lower or stop the roller shutter, plus precise press.
- Reset and linking: reset button, LED and how to connect the Connect-2 to the app.
- AP Mode and Master Mode: setup and group control of all the roller shutters in the home.
- Multi-Mode button: switches between the available control options.
- App: access to Windows and Connect-2 settings.

THREE BUTTONS

UP · Multi-Mode · DOWN

SHUTTER CONTROL

Physical operation

ROLLER SHUTTER CONTROL

The Connect-2 has three buttons. UP and DOWN move the roller shutter. The centre button (Multi-Mode) switches between control options.



UP
Up

MULTI-MODE
Change option

DOWN
Down

NORMAL PRESS

- UP: raises the roller shutter. If the shutter is moving, press it again to stop it.
- DOWN: lowers the roller shutter. If the shutter is moving, press it again to stop it.

PRECISE PRESS

Control and positioning

PRECISE CONTROL

Press and hold UP or DOWN and the roller shutter moves. When you release the button, it stops.



UP

Precise raising of the roller shutter; stops when released.



DOWN


Precise lowering of the roller shutter; stops when released.

SEQUENCE

Press and hold → roller shutter moves → release → STOP

RESET AND LINKING

How to get the Connect-2 ready to link to the app

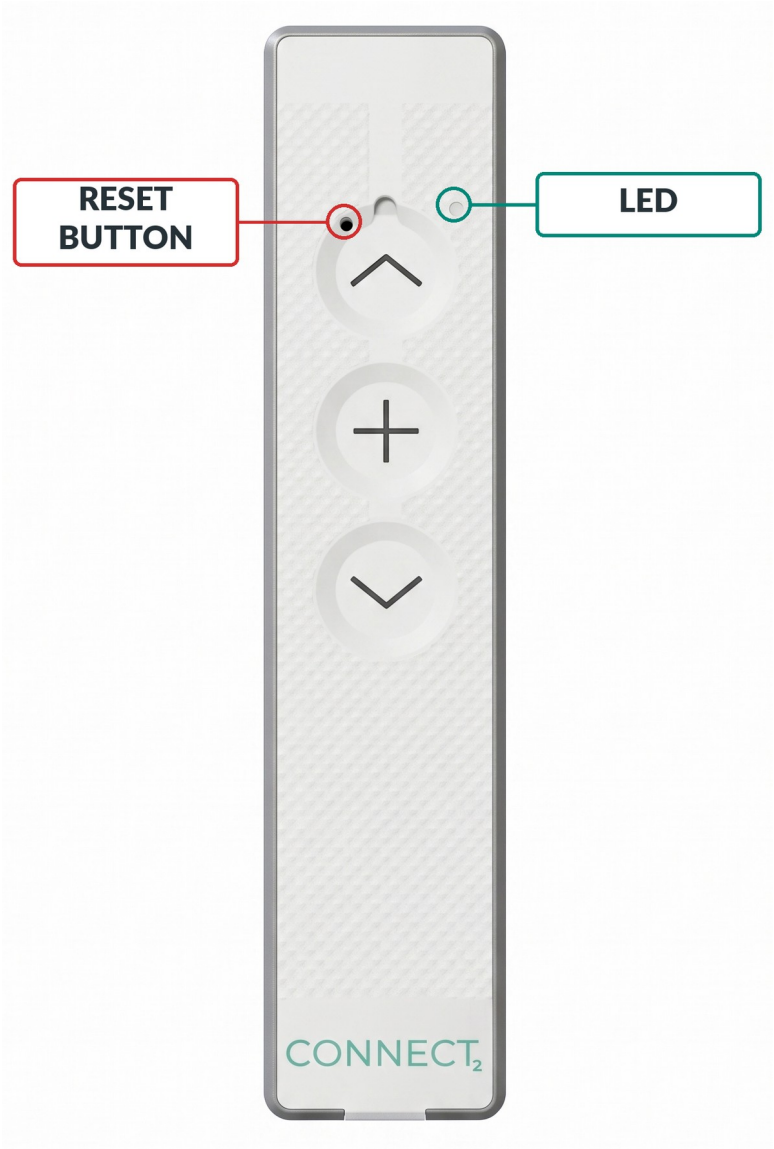

RESET BUTTON

It is inside a small pinhole at the top left, above the UP button. To press it, use a **paperclip or something thin**.

LED

It is the small dot at the top right, above the UP button, next to the reset pinhole.

If it blinks slowly (once every 2 seconds), the Connect-2 is **ready to pair with the app**.

BEFORE YOU START Your Wi-Fi network must be **2.4 GHz**. 5 GHz networks do not work. The Connect-2 must also be in an area with good Wi-Fi coverage.

HOW TO LINK THE CONNECT-2

Choose your case and follow the steps in order

CASE 1 · NEW INSTALLATION

This is the first time you are connecting the Connect-2.

STEP 1	STEP 2	STEP 3
Check the LED	**Press reset**	**Open the app**
If the LED blinks slowly (once every 2 seconds), go to step 3.	Using a paperclip, press and hold the reset button for 2 seconds. The LED will start to blink slowly.	Open MySmartWindow and follow the linking wizard.

CASE 2 · LINK AGAIN

The Connect-2 has already been connected to an account before.

STEP 1	STEP 2	STEP 3	STEP 4
Press reset	**Wait**	**UP + DOWN**	**Open the app**
Using a paperclip, press and hold the reset button for 2 seconds.	Wait 5 seconds without pressing anything.	Press and hold the UP and DOWN buttons together for about 10 seconds.	The LED blinks slowly. Open MySmartWindow and follow the wizard.

DONE When linking finishes successfully, the app shows the Connect-2 as connected.

WON'T CONNECT? Check that your Wi-Fi is **2.4 GHz**, that coverage is good where the Connect-2 is installed, and repeat the steps from the beginning.

AP MODE

Access via physical button combination

ACTIVATING AP MODE

To activate AP Mode, the Connect-2 must first be in Pairing Mode, that is, ready to connect to the app (the LED blinks slowly, once every 2 seconds). Then perform the combination below.

- 1. Check that the LED blinks slowly (Pairing Mode).
- 2. Press and hold UP and DOWN together for 10 seconds.

SEQUENCE

Pairing Mode → UP + DOWN · 10 s → AP Mode

MASTER MODE

Group control of the whole Home

ACTIVATION

1. Long press for 5 seconds.
2. Then a normal press runs the corresponding command.

UP

Fully raises the whole Home.

DOWN

Fully lowers the whole Home.

PRESS

Long press for 5 s to activate → normal press to run UP or DOWN

MULTI-MODE BUTTON

Control option selection

CENTRE BUTTON FUNCTION

The centre button lets you move through the different control options the switch has acquired.

These options may be available through the system's own electrical connections or through virtual activation of services.

ELECTRICAL CONNECTION

For example, with a tilt motor.

VIRTUAL SERVICE

For example, by activating Aidoo.

SUMMARY

The Multi-Mode button switches between the different control functions available on the switch.

1. MAIN SCREEN

MySmartWindow app · visual walkthrough



WHAT DOES THIS SCREEN SHOW?


The MySmartWindow home screen brings together the main shortcuts of the app. To manage the associated devices, the walkthrough starts by opening the Windows ("Ventanas") section.

STEP BY STEP

- Find the Windows ("Ventanas") shortcut.
- Press Windows to continue to device management.

2. ACCESS TO WINDOWS

MySmartWindow app · visual walkthrough

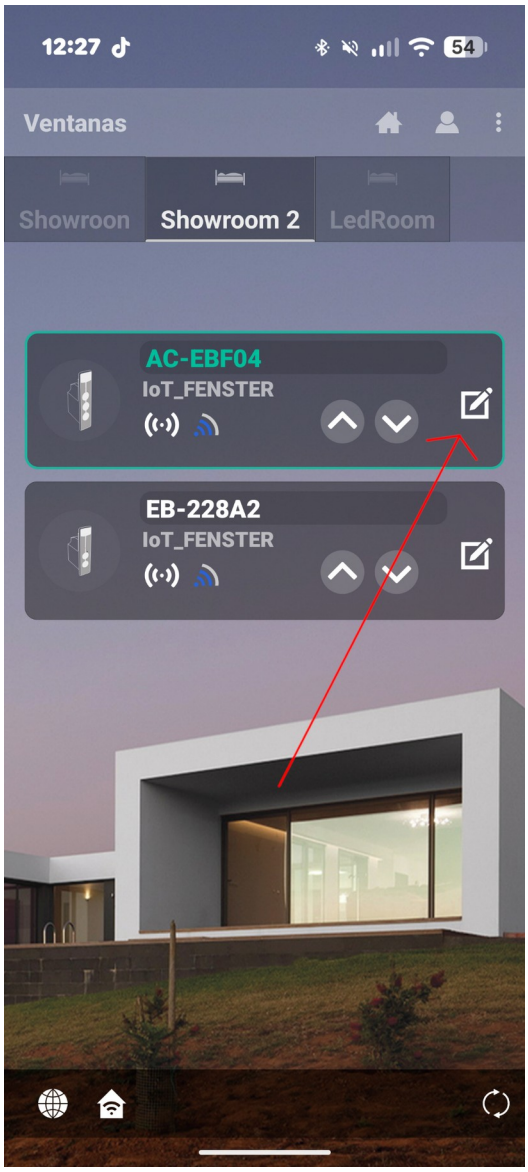

WHAT DOES THIS SCREEN SHOW?


The Windows section organises devices by room. The screenshot shows device AC-EBF04 in Showroom 2, with the raise and lower controls and the edit icon.

STEP BY STEP

- Select the relevant room.
- Find device AC-EBF04.
- Press the edit icon to open the settings.

3. CONNECT-2 SETTINGS

MySmartWindow app · visual walkthrough

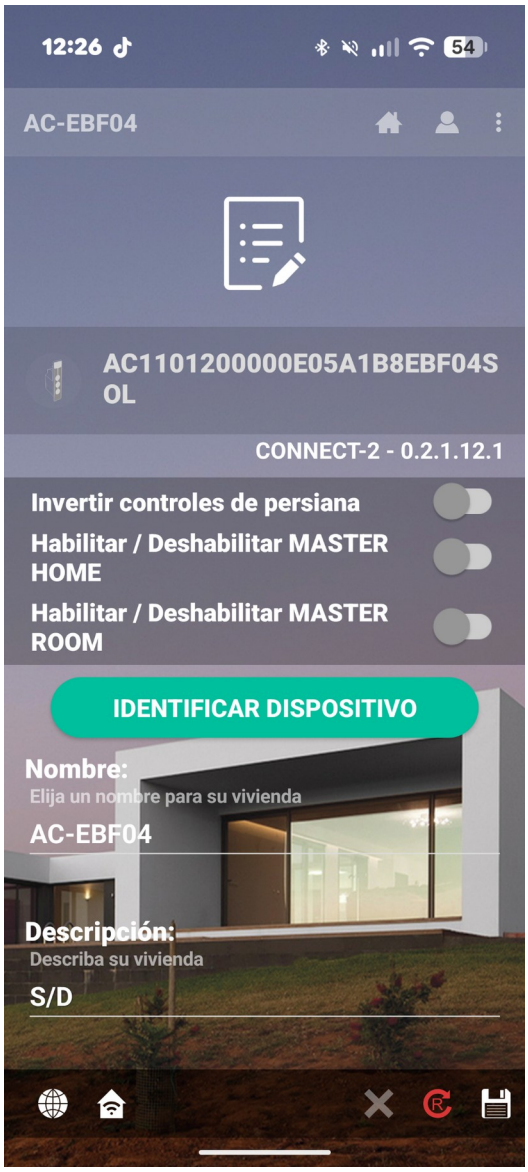

WHAT DOES THIS SCREEN SHOW?


The settings screen identifies the device and shows the version CONNECT-2 - 0.2.1.12.1. From here you can configure the available options and edit the device details.

STEP BY STEP

- Review the settings options.
- Use Identify device ("Identificar dispositivo") to locate the device.
- Edit the name and description to suit the installation.

4. REVERSE SHUTTER CONTROLS

MySmartWindow app · visual walkthrough

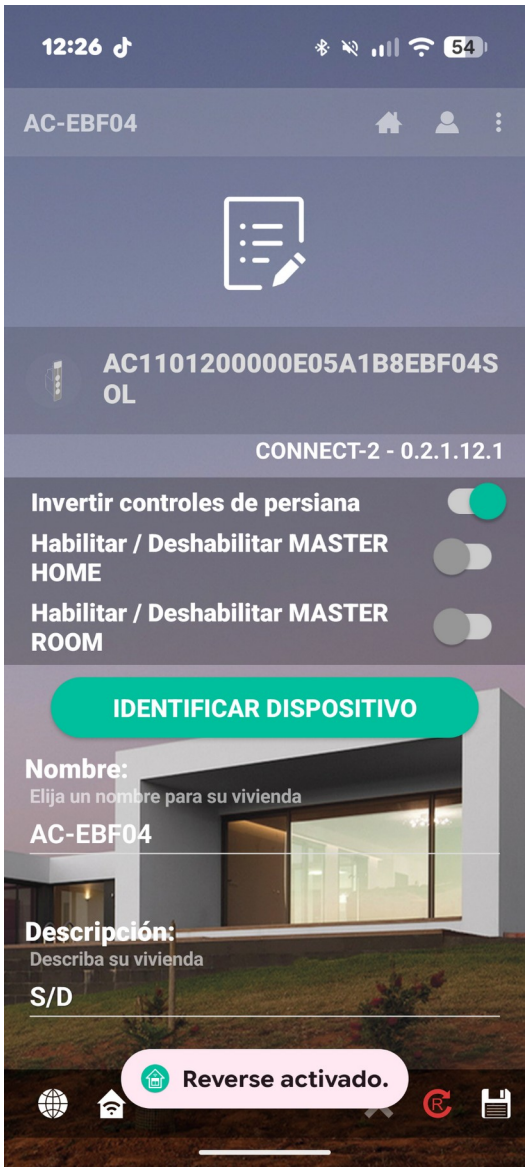

WHAT DOES THIS SCREEN SHOW?


The Reverse shutter controls ("Invertir controles de persiana") option swaps the direction assigned to UP and DOWN. The screenshot shows the switch turned on and the confirmation message "Reverse activado".

STEP BY STEP

- Find Reverse shutter controls ("Invertir controles de persiana").
- Turn the switch on or off as needed.
- Check the confirmation message.

5. ENABLE MASTER HOME

MySmartWindow app · visual walkthrough

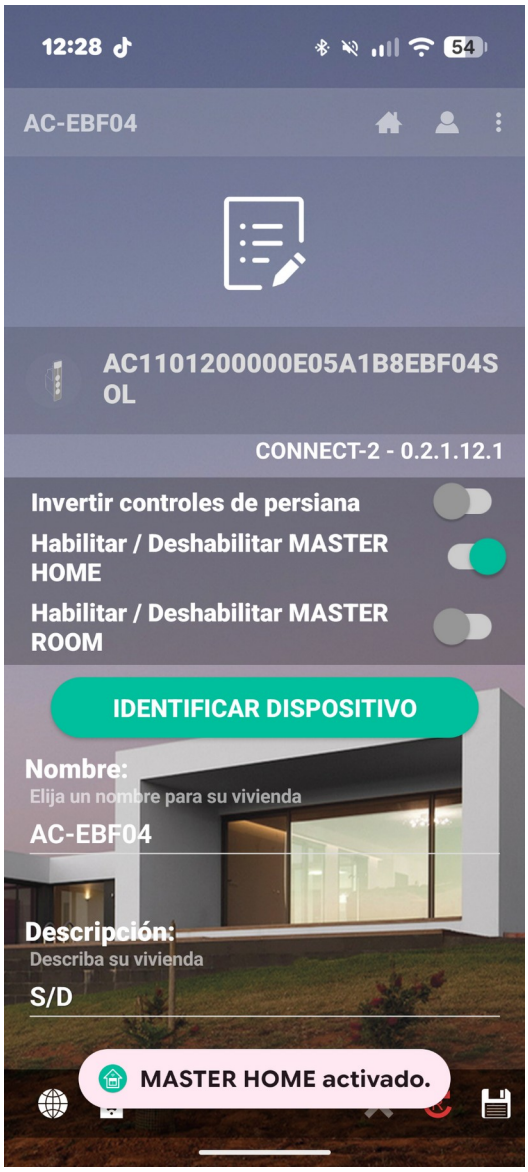

WHAT DOES THIS SCREEN SHOW?


The Enable / Disable MASTER HOME ("Habilitar / Deshabilitar MASTER HOME") option enables group control of the whole Home. The screenshot shows the message "MASTER HOME activado".

STEP BY STEP

- Find Enable / Disable MASTER HOME ("Habilitar / Deshabilitar MASTER HOME").
- Turn the switch on.
- Check the confirmation message.

6. ENABLE MASTER ROOM

MySmartWindow app · visual walkthrough

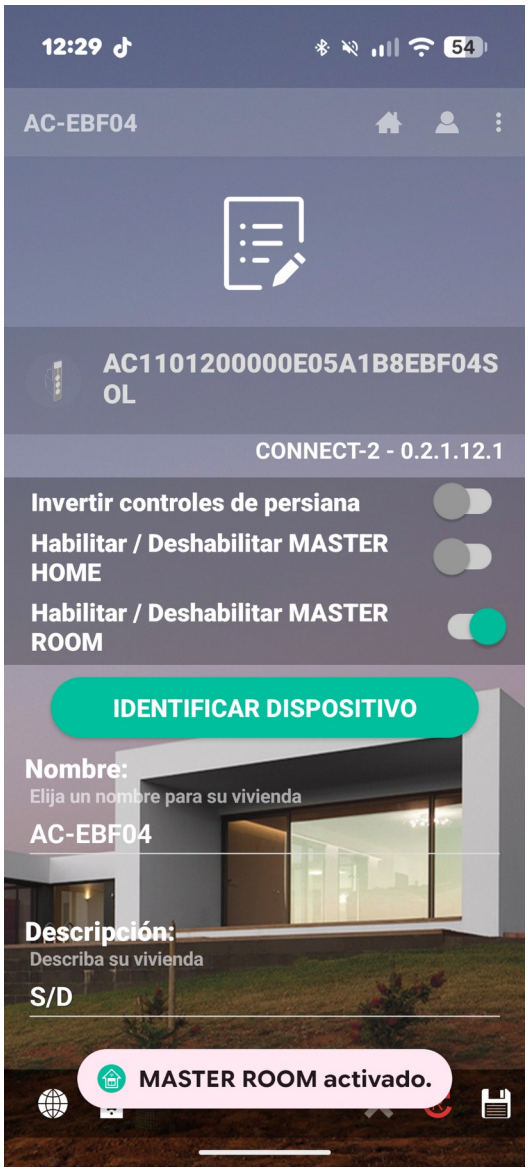

WHAT DOES THIS SCREEN SHOW?

The Enable / Disable MASTER ROOM ("Habilitar / Deshabilitar MASTER ROOM") option enables the group control associated with the room. The screenshot shows it being turned on and the message "MASTER ROOM activado".

STEP BY STEP

- Find Enable / Disable MASTER ROOM ("Habilitar / Deshabilitar MASTER ROOM").
- Turn the switch on.
- Check the confirmation message.

APP SUMMARY

Flow documented with the screenshots provided

WALKTHROUGH

Main screen → Windows → device → settings → specific setting.

- 1. Access to Windows
- 2. Selecting and editing the device
- 3. Connect-2 settings
- 4. Reverse shutter controls
- 5. Enabling MASTER HOME
- 6. Enabling MASTER ROOM

DOCUMENTED FEATURES

Device control · settings · Reverse · MASTER HOME · MASTER ROOM

CONNECT-2

This guide explains how to use and set up your Connect-2.

KEY POINTS

Shutter control · Precise press · Reset and linking · AP Mode · Master Mode · Multi-Mode button · Settings from the app

Once You Have It, You Love It.